

Setting up Utilities for **EPSON CX6000**



- 1 -  Power on solid green
- 2 - Setup Utilities

Adjust Copy Quality

Press Start  Select Photo press Start again  to set

Adjust Borderless Setting

Press  to Borderless Setting


Press  to MAX then Start  to set

Press Setup Utilities to complete other Functions including:

Print head Cleaning, Nozzle Check and Changing Color Tanks

Once the Utilities have been set, the Cx6000 will maintain those settings. However, if the Stop/Clear Button is pressed, you will need to perform Setup again!

EPSON CX6000

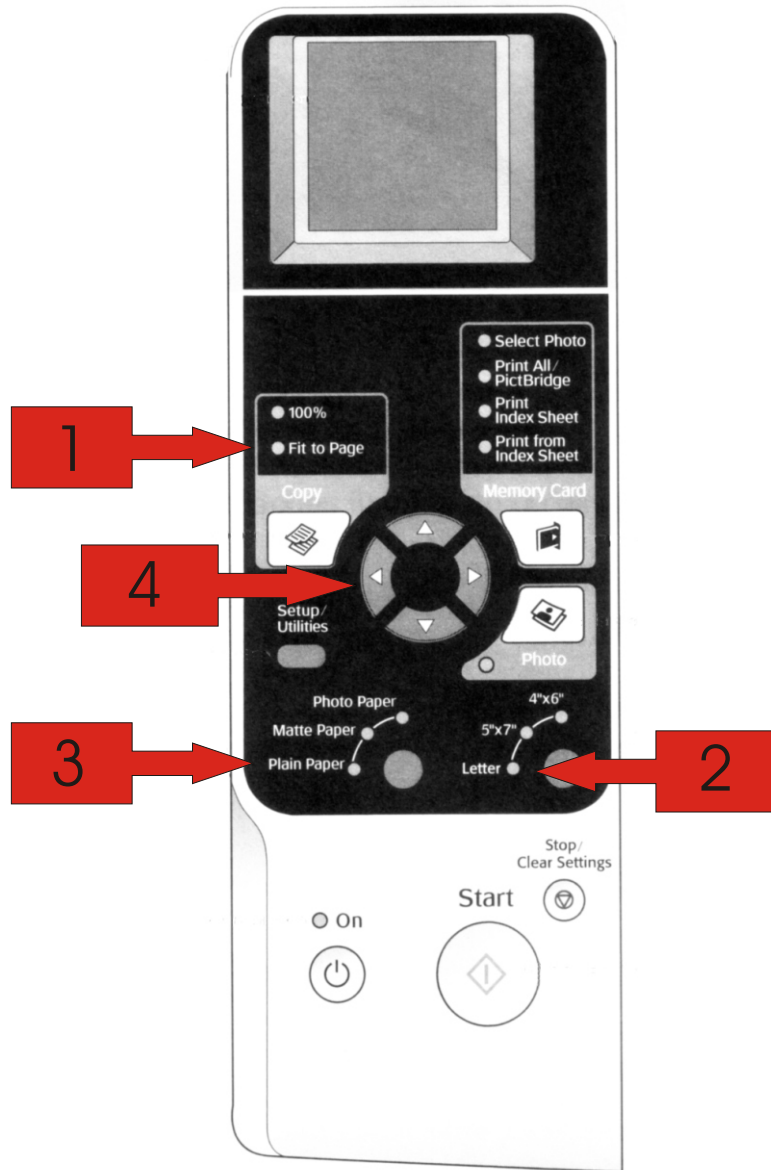

Setup for Printing

- 1 - Press Copy "Fit to Page"
- 2 - Select "Letter"
- 3 - Select "Plain Paper"
- 4 - Select Color or BW



Placing Photo

Open the document cover and place **Photo** face down on the glass in the upper lefthand corner. Move **Photo** 1/4" from the top and side edges of glass.

Load **Frosting Sheet™** in paper tray, frosting side facing you.

Press "Start Button"  to Copy and Print