


EPSON CX8400

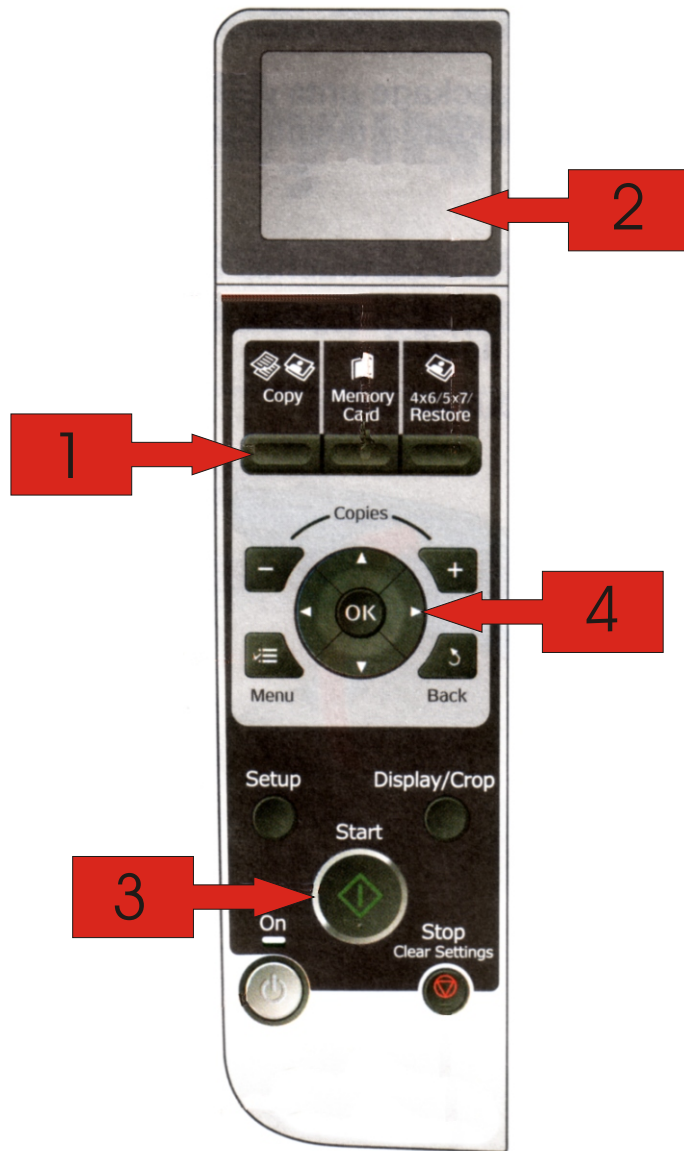

Setup for Printing

- 1 - Press Copy
- 2 - Select Color or BW
◀ or ▶
by pressing arrow buttons (#4)

Placing Photo

Open the document cover and place **Photo** face down on the glass in the lower right-hand corner. Move **Photo** 1/2" from the bottom and right-hand edges of glass.



 
 
 
 
Load **Frosting Sheet**TM in paper tray, frosting side facing you.

Press (#3) "Start Button" ◊ to Copy and Print

Setting up Utilities for **EPSON CX8400**

- 1 -  Power on solid green
- 2 - Setup Utilities - Press Menu button



- | | | |
|------------|---|--------------------|
| | Select | |
| Zoom |  | Auto Fit Page |
| Paper Type |  | Matte |
| Paper Size |  | Letter |
| Quality |  | Standard (Default) |
| Density |  | +/- 0 (Default) |
| Expansion |  | Standard (Default) |

- 3 - Press Copy Button to complete setup

Press Setup Button to complete other Functions including:

Print head Cleaning, Nozzle Check and Changing Color Tanks

Once the Utilities have been set, the CX8400 will maintain those settings. However, if the Stop/Clear Button is pressed, you will need to perform Setup again!