

Set up Hints for Kwikscan VIII Tank-less Printer

*WHEN USED WITH A COMPUTER OR AS A STAND ALONE

(please use the included setup instructions, however when prompted, fill with Kopykake Edible Inks ONLY)

Read Carefully


- Insert the correct color using Kopykake's edible ink refills into the reservoirs (RFK04 Edible Ink Refill Kit).
- Do not remove reservoir caps except to refill with Edible Ink
- Close the CISS reservoir cover
- Settings for All-in-One and Computer operated printers- make sure your settings are as follows:

We recommend the following settings when used with a Computer:

Paper Type = "Premium Presentation Paper Matte"
Quality = "High"

We recommend the following settings when used without a Computer:

Paper Type = "Premium Glossy"
Quality = "Best"

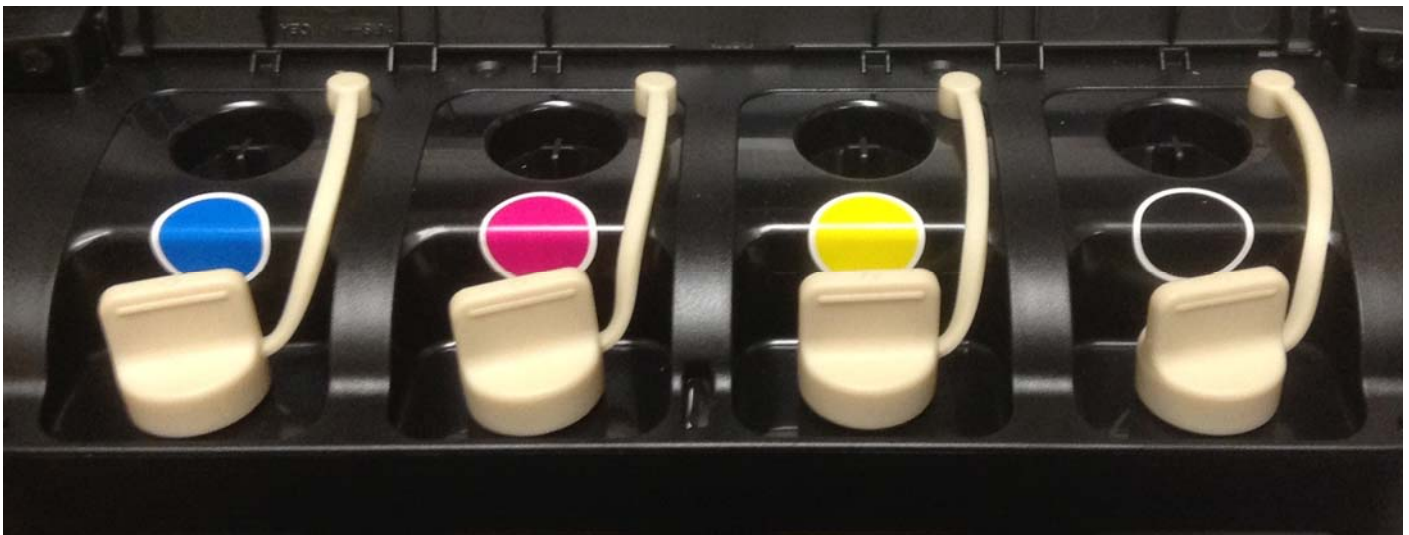

*** Due to shelf life and other health issues, Kopykake does not allow returns of Edible Ink Tanks ***

