

INFORMATION ABOUT CERTAIN CANON PRINTERS
PLEASE READ CAREFULLY....

CANON HAS RECENTLY INTRODUCED A LINE OF PRINTERS THAT ONLY USE INK TANKS
REQUIRING A MICROCHIP ON EACH TANK.

AT THIS TIME WE ARE **NOT** ABLE TO GET EMPTY TANKS WITH THESE MICROCHIPS FOR
OUR EDIBLE INK TANKS.

THE SOLUTION IS AS FOLLOWS:

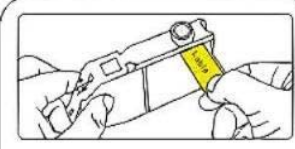
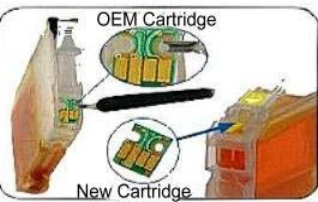
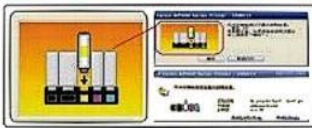
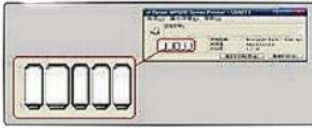
- A. PURCHASE THE CORRECT EMPTY TANKS OR TANK SET FROM KOPYKAKE WITHOUT MICROCHIPS. (THESE ARE ONLY OUR "IP42" TANK SERIES.)
- B. NEXT REMOVE THE MICROCHIPS FROM THE **ACTUAL CANON INK TANKS** THAT YOU RECEIVED WITH YOUR PRINTER.
- C. AFFIX THOSE MICROCHIPS ONTO **OUR** EDIBLE INK TANKS.
- D. YOU SHOULD THEN BE ABLE TO PRINT ONTO OUR EDIBLE FROSTING SHEETS PROPERLY.
- E. YOU MUST BE SURE THAT THE CORRECT COLOR MICROCHIP GOES ONTO OUR CORRESPONDING TANK. EXAMPLE: **BLACK** CHIP GOES ONTO OUR **BLACK** TANK, **CYAN** CHIP GOES ONTO OUR **CYAN** TANK, **ETC.** (DO NOT MIX THESE UP).
- F. YOU WILL BE ABLE TO USE THESE CHIPS OVER AND OVER AGAIN ON FUTURE EDIBLE TANKS FROM KOPYKAKE.

YOU SHOULD VISIT OUR WEBSITE AND PASTE THIS IN YOUR BROWSER:

<http://www.kopykake.com/documents/PrinterInks-Xref.pdf>

THIS IS A CURRENT CROSS REFERENCE OF POSSIBLE INK TANKS AND PRINTERS THAT WILL WORK WITH THIS METHOD.

NOTE: BE SURE TO ORDER THE CORRECT TANKS FOR YOUR PRINTER, AS WE DO **NOT** ALLOW RETURNS OF THESE INK TANKS.

<p>Please use cartridge as below instruction</p> <p>Please remove the adhesive tape from the cartridge before installing into the printer</p>  <p>Remove the sealing tape</p>	<p>1.</p> <p>Very carefully remove the chip from the original cartridge with an appropriate tool, such as a small knife or screwdriver. Place the chip into the slot intended for it on the cartridge as shown below. Extra care must be taken not to damage the chip in any way while removing or installing it.</p>  <p>OEM Cartridge</p> <p>New Cartridge</p>	<p>2.</p> <p>During printing, when the screen shows your ink volume is low and indicates you to replace a new ink cartridge, what you need to do at this moment is to choose to go on using the cartridge. If at that moment the OEM chip has been installed to the new cartridge, please go on using, the new cartridge will not damage the printer.</p> <p>3.</p> <p>In the process of printing, when the screen shows exactly the same as on the following picture, you are not allowed to do any printing. What you need to do at that time is to press the RESET button for 10 seconds. The chip will automatically be decoded.</p>	 <p>4.</p> <p>The decoded chips will not reflect the correct ink volume informations. All the cartridges will be shown as empty in the screen, so you need to watch and replace ink cartridges when their inks are used up timely.</p> 
--	---	--	---

MAY 17, 2007