

 
 
 
 
 
 
Setting up Utilities for **EPSON NX400**

- 1 -  Power on solid green
- 2 - Setup Utilities - Press Menu button



Menu

Power

	Select	
Zoom		Auto Fit Page
Paper Type		Matte
Paper Size		Letter
Quality		Standard (Default)
Density		+/- 0 (Default)
Expansion		Standard (Default)

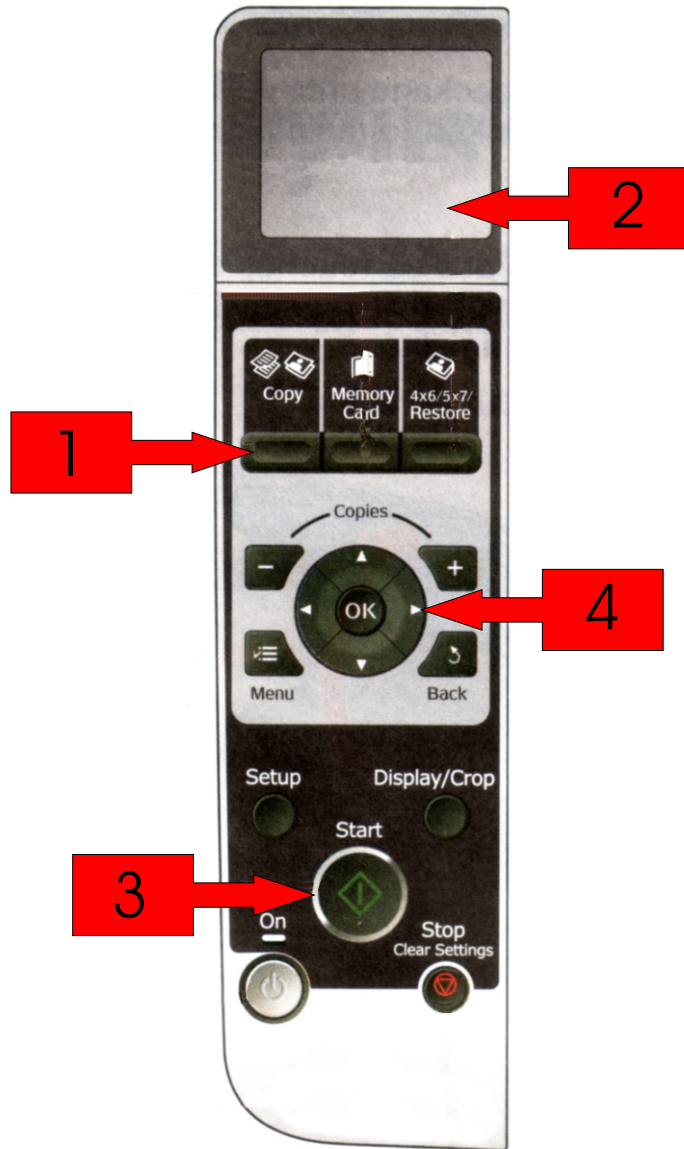
- 3 - Press Copy Button to complete setup

Press Setup Button to complete other Functions including:

Print head Cleaning, Nozzle Check and Changing Color Tanks

Once the Utilities have been set, the NX400 will maintain those settings. However, if the Stop/Clear Button is pressed, you will need to perform Setup again!

EPSON NX400



Setup for Printing

- 1 - Press Copy
- 2 - Select Color or BW
◀ or ▶
by pressing arrow
buttons (#4)

Placing Photo

Open the document cover and place **Photo** face down on the glass in the lower right-hand corner. Move **Photo** 1/2" from the bottom and right-hand edges of glass.

Load **Frosting Sheet**TM in paper tray, frosting side facing you.

Press (#3) "Start Button" ◊ to Copy and Print