

*** DOMESTIC & EXPORT ***

CANON CROSS REFERENCE CHART

CROSS REFERENCE CHART - KOPYKAKE EDIBLE INK TANK NUMBERS																		6/25/2009																
CANON PRINTER MODELS	CANON PRINTER MODELS	IP42BKL	IP42-C	IP42-M	IP42-Y	IP42-BKS	IP42-PC	IP42-PM	PGI-5BK	CLI-8C	CLI-8M	CLI-8Y	CLI-8BK	CLI-8PC	CLI-8PM	6000-BLK	6000-CYA	6000-MAG	6000-YEL	9000-BLK	6000-PC	6000-PM	520-B	521-B	521-C	521-M	521-Y	C520-B	C521-B	C521-C	C521-M	C521-Y	KOPYKAKE INK TANK SETS NO CHIPS	KOPYKAKE INK TANK SETS <i>WITH</i> CHIPS
																																"A"	"B"	
I-560	I-6500															1	1	1	1													6000-SET		
IP3000																1	1	1	1													6000-SET		
IP3500		1	1	1	1				1	1	1	1																			IP42SET-4	CP42SET-4		
IP3600	IP4600																						1	1	1	1	1	1	1	1	1	525SET-5	*C525SET-5	
IP4000	IP5000															1	1	1	1	1											4000-SET			
IP4200	IP4300	1	1	1	1	1			1	1	1	1	1																		IP42SET-5	CP42SET-5		
IP4500	IP5200R	1	1	1	1	1			1	1	1	1	1																		IP42SET-5	CP42SET-5		
IP6000D																1	1	1	1	1	1										9006-SET			
IP6600D	IP6700D		1	1	1	1	1		1	1	1	1	1	1																	IP42SET-6	CP42SET-6		
IX4000	IX5000	1	1	1	1				1	1	1	1				THESE MODELS WILL PRINT A4 AND A3 SIZES OR 1/4 SHEET + 1/2 SHEET										IP42SET-4	CP42SET-4							
CANON MULTI- FUNCTION MODELS	CANON MULTI- FUNCTION MODELS	IP42BKL	IP42-C	IP42-M	IP42-Y	IP42-BKS	IP42-PC	IP42-PM	PGI-5BK	CLI-8C	CLI-8M	CLI-8Y	CLI-8BK	CLI-8PC	CLI-8PM	6000-BLK	6000-CYA	6000-MAG	6000-YEL	9000-BLK	6000-PC	6000-PM	520-B	521-B	521-C	521-M	521-Y	C520-B	C521-B	C521-C	C521-M	C521-Y	MULTI- FUNCTION INK TANK SETS NO CHIPS	KOPYKAKE INK TANK SETS <i>WITH</i> CHIPS
MP500	MP530	1	1	1	1	1			1	1	1	1	1																			IP42SET-5	CP42SET-5	
MP600R	MP610	1	1	1	1	1			1	1	1	1	1																			IP42SET-5	CP42SET-5	
MP510	MP520	1	1	1	1				1	1	1	1																				IP42SET-4	CP42SET-4	
MX700		1	1	1	1				1	1	1	1																				IP42SET-4	CP42SET-4	
MP540	MP620																						1	1	1	1	1	1	1	1	1	525SET-5	C525SET-5	
MX860																							1	1	1	1	1	1	1	1	1	525SET-5	C525SET-5	
MP750	MP760															1	1	1	1	1												4000-SET		
MP780																1	1	1	1	1												4000-SET		
F30	F-50															1	1	1	1													6000-SET		
F-60	F-80															1	1	1	1													6000-SET		
MP800	MP810	1	1	1	1	1			1	1	1	1	1																			IP42SET-5	CP42SET-5	
MP830	MX850	1	1	1	1	1			1	1	1	1	1																			IP42SET-5	CP42SET-5	

** BLACK TYPE - AND WHITE BACKGROUND INDICATES KOPYKAKE INK TANKS AND SETS *WITHOUT* MICROCHIPS

** RED TYPE - AND YELLOW BACKGROUND INDICATES KOPYKAKE INK TANKS AND SETS *WITH* MICROCHIPS

** BLUE TYPE - INDICATES ACTUAL CANON PRINTER NUMBERS

PRINTERS WITH LITE GREEN BACKGROUND ARE AVAILABLE ONLY OUTSIDE OF THE U.S.A.

EXPLANATION: PLEASE READ CAREFULLY.....

1. FIND YOUR PRINTER MODEL FROM THE CANON PRINTER MODELNUMBERS LISTED IN **BLUE**

2. END OF THE LINE SEE COLUMN "A" (PRINTED IN BLACK) +FOR THE INK TANK SETS *WITHOUT* MICROCHIPS

3. OR THE END OF THE LINE SEE COLUMN "B" (PRINTED IN RED) FOR INK TANK SETS *WITH* MICROCHIPS

4. THE INDIVIDUAL TANK NUMBERS ARE LISTED ABOVE EACH ROW (BLACK=NO CHIPS) OR (RED=WITH CHIPS)

* U.S.A - DOMESTIC *

EPSON CROSS REFERENCE

CHART - KOPYKAKE EDIBLE INK TANK NUMBERS

6/19/2009

ALL OF OUR EPSON TANKS INCLUDE REQUIRED MICROCHIPS

EPSON PRINTER MODELS	EPSON PRINTER MODELS	EB601	EC602	EM603	EY604	T0691-B	T0692-C	T0693-M	T0694-Y	T0791-B	T0792-C	T0793-M	T0794-Y	T0795-PC	T0796-PM	KOPYKAK E INK TANK SETS WITH CHIPS
		"A"														
C87 AND C87+	C88 AND C88+	1	1	1	1											ESET605
C120	WORKFORCE 30					2	1	1	1							T0695SET-5
WORKFORCE 40						1	1	1	1							T0695SET-4
1400										1	1	1	1	1	1	T0797SET-6
ABOVE IS THE ONLY EPSON MODEL THAT PRINTS 1/4 & 1/2 SHEET																
EPSON MULTI- FUNCTION MODELS	EPSON MULTI- FUNCTION MODELS	EB601	EC602	EM603	EY604	T0691-B	T0692-C	T0693-M	T0694-Y	T0791-B	T0792-C	T0793-M	T0794-Y	T0795-PC	T0796-PM	MULTI- FUNCTION INK TANK SETS
		"A"														
CX5000	CX6000					1	1	1	1							T0695SET-4
CX7000	CX7400					1	1	1	1							T0695SET-4
CX8400	CX9400F					1	1	1	1							T0695SET-4
NX100	NX115					1	1	1	1							T0695SET-4
NX200	NX215					1	1	1	1							T0695SET-4
NX300						1	1	1	1							T0695SET-4
NX400	NX415					1	1	1	1							T0695SET-4
NX510	NX515					1	1	1	1							T0695SET-4
WORKFORCE 500	WORKFORCE 600					1	1	1	1							T0695SET-4
WORKFORCE 310						2	1	1	1							T0695SET-5
CX7800		1	1	1	1											ESET605

** ALL EDIBLE INK TANKS FOR EPSON ARE EQUIPPED WITH PROPER MICROCHIPS

** BLUE TYPE - INDICATES EPSON PRINTER NUMBERS

EXPLANATION: PLEASE READ CAREFULLY.....

1. FIND YOUR PRINTER MODEL FROM THE EPSON PRINTER MODELS LISTED IN BLUE PRINTING

2. AT THE END OF THE LINE SEE COLUMN "A" (PRINTED IN BLACK) FOR THE CORRECT INK TANK SETS WITH MICROCHIPS

3. THE INDIVIDUAL TANK NUMBERS ARE LISTED ABOVE EACH ROW

4. PRINTERS ON THIS PAGE ARE AVAILABLE IN THE U.S.A

******* EXPORT *******

7/2/2009

ALL EPSON TANKS HAVE CHIPS

EPSON CROSS REFERENCE CHART

CROSS REFERENCE CHART - KOPYKAKE EDIBLE INK TANK NUMBERS

6/19/2009

EPSON PRINTER MODELS	EPSON PRINTER MODELS	EB601	EC602	EM603-M	EY604-Y	T0711-B	T0712-C	T0713-M	T0714-Y	T0731-B	T0732-C	T0733-M	T0734-Y	TX731-B	TX732-C	TX733-M	TX734-Y	KOPYKAKE INK TANK SETS WITH CHIPS
C79	C90									1	1	1	1					T0735SET-4
C92										1	1	1	1					T0735SET-4
C110										2	1	1	1					T0735SET-5
D120						2	1	1	1									T0715SET-5
D78						1	1	1	1									T0715SET-4
D88 - D88+		1	1	1	1													ESET605
D92	S20					1	1	1	1									T0715SET-4
T30														2	1	1	1	TX735SET-5
T40	T40W													1	1	1	1	TX735SET-4
1400		THIS IS THE ONLY EPSON MODEL THAT PRINTS A3 OR 1/2 SHEETS																T0797SET-6
		TANKS: T0791-B, T0792-C, T0793-M, T0794-Y, T0795-PC, T0796-PM																
	EPSON MULTI- FUNCTION MODELS					T0711-B	T0712-C	T0713-M	T0714-Y	T0731-B	T0732-C	T0733-M	T0734-Y	TX731-B	TX732-C	TX733-M	TX734-Y	MULTI- FUNCTION INK TANK SETS
CX3900	CX3905									1	1	1	1					T0735SET-4
CX4900	CX4905									1	1	1	1					T0735SET-4
CX5500	CX5505									1	1	1	1					T0735SET-4
CX5600	CX5900									1	1	1	1					T0735SET-4
CX6900F	CX7300									1	1	1	1					T0735SET-4
CX7310	CX8300									1	1	1	1					T0735SET-4
CX9300F										1	1	1	1					T0735SET-4
DX4000	DX4400					1	1	1	1									T0715SET-4
DX4450	DX5050					1	1	1	1									T0715SET-4
DX6000	DX6050					1	1	1	1									T0715SET-4
DX7000F	DX7400					1	1	1	1									T0715SET-4
DX7450	DX8400					1	1	1	1									T0715SET-4
DX8450						1	1	1	1									T0715SET-4
TX100	TX200													1	1	1	1	TX735SET-4
TX300F	TX400													1	1	1	1	TX735SET-4
SX200	SX205					1	1	1	1									T0715SET-4
SX400	SX205					1	1	1	1									T0715SET-4

** ALL EDIBLE INK TANKS ARE EQUIPPED WITH PROPER MICROCHIPS

** BLUE TYPE - INDICATES EPSON PRINTER NUMBERS

EXPLANATION: PLEASE READ CAREFULLY.....

1. FIND YOUR PRINTER MODEL FROM THE EPSON PRINTER MODELS LISTED IN BLUE PRINTING
2. AT THE END OF THE LINE SEE COLUMN "A" (PRINTED IN BLACK) FOR CORRECT INK TANK SETS WITH MIC
3. THE INDIVIDUAL TANK NUMBERS ARE LISTED ABOVE EACH ROW
4. PRINTERS IN THESE PAGES ARE NOT AVAILABLE IN THE U.S.A.

READ **CAREFULLY** ABOUT **MICROCHIP EDIBLE INK TANKS** FOR KOPYKAKE PRINTING

CANON HAS RECENTLY INTRODUCED A NEWER LINE OF PRINTERS THAT ONLY USE INK TANKS REQUIRING A MICROCHIP ON EACH TANK..

WE **NOW** HAVE EDIBLE INK TANKS FOR MANY **CANON** AND **EPSON** PRINTER MODELS.

THE ABOVE 2 PAGES SHOW A CROSS REFERENCE OF AVAILABLE INK TANKS AND THEIR COMPATIBLE PRINTERS. THERE ARE 3 DIFFERENT CROSS REFERENCE SHEETS

- A) PAGE (1) IS FOR **CANON PRINTERS** (THIS PAGE IS FOR **BOTH U.S.A and OUTSIDE U.S.A.**)
- B) PAGE (2) IS FOR **EPSON PRINTERS** (THIS PAGE IS FOR **U.S.A. ONLY**)
- C) PAGE (3) IS FOR **EPSON PRINTERS** (THIS IS 2 PAGES FOR **OUTSIDE U.S.A. ONLY**)

CANON SOLUTION TO USE KOPYKAKE TANKS WITH MICROCHIPS IS AS FOLLOWS:

- 1. PURCHASE THE CORRECT EDIBLE TANKS OR TANK SET FROM KOPYKAKE WITH MICROCHIPS (THESE INDIVIDUAL TANKS SETS BEGIN WITH “**CLI**” AND “**PGI**” AND THE TANK SETS BEGIN WITH “**CP42SET**”
- 2. YOU THEN MERELY INSERT THESE TANKS INTO YOUR PRINTER AND YOU SHOULD BE READY TO PRINT ONTO OUR EDIBLE FROSTING SHEETS.

CANON SOLUTION TO USE KOPYKAKE TANKS WITHOUT MICROCHIPS IS AS FOLLOWS:

- A. PURCHASE THE CORRECT EDIBLE TANKS OR TANK SETS FROM KOPYKAKE WITHOUT MICROCHIPS. (THESE INDIVIDUAL TANKS BEGIN WITH “**IP42**” AND THE TANK SETS ALL BEGIN WITH “**IP42SET**”)
- B. YOU THEN WOULD NEED TO REMOVE THE MICROCHIPS THAT CAME ON THE **ACTUAL CANON INK TANKS** THAT YOU RECEIVED WITH YOUR PRINTER.
- C. YOU CAN AFFIX THOSE MICROCHIPS ONTO **OUR** EDIBLE INK TANKS.
- D. YOU SHOULD THEN BE ABLE TO PRINT ONTO OUR EDIBLE FROSTING SHEETS PROPERLY.
- E. YOU MUST BE SURE THAT THE CORRECT COLOR MICROCHIP GOES ONTO OUR CORRESPONDING TANK. **EXAMPLE: BLACK** CHIP GOES ONTO OUR **BLACK** TANK, **CYAN** CHIP GOES ONTO OUR **CYAN** TANK, **ETC.** (**DO NOT MIX THESE UP**).
- F. YOU WILL BE ABLE TO USE THESE CHIPS OVER AND OVER AGAIN ON FUTURE EDIBLE TANKS FROM KOPYKAKE.

EPSON SOLUTION TO USE KOPYKAKE TANKS (ALL INCLUDE CORRECT MICROCHIPS)

- a. PURCHASE THE CORRECT EDIBLE TANKS OR TANK SETS FROM KOPYKAKE.
- b. YOU MERELY INSERT THESE TANKS INTO YOUR PRINTER AND YOU SHOULD BE READY TO PRINT ONTO OUR EDIBLE FROSTING SHEETS.

NOTE: SOME PRINTERS USE 4, 5 OR 6 TANKS, SO BE SURE TO PURCHASE THE CORRECT SET

NOTE: BE SURE TO ORDER THE CORRECT TANKS FOR YOUR PRINTER, AS WE DO **NOT** ALLOW RETURNS OF THESE INK TANKS.

HELPFUL NOTES REGARDING THE **CANON** PRINTERS AND **EPSON** PRINTERS

ALL TANKS – BE SURE CORRECT COLOR CHIP IS ON THE MATCHING COLOR INK. THESE CANNOT BE MIXED. THEY WILL NOT WORK PROPERLY.

By viewing the attached Xref pages, you will see which Kopykake Tank Set is right for your Printer..

If you choose to purchase the Canon Tanks without Chips, you can use the Original Canon Chips on our tanks. (See instruction sheet as to how this is done).

If you purchase our Canon Tanks with Chips, then you are ready to go immediately.

If you decide to Re-fill these tanks, then the chip can just remain on that tank.

Swapping these Microchips between tanks is quite easy. No glue or adhesive is required. They can just be removed with a tweezers or tiny screwdriver....and then snap onto two tiny plastic tips that are on each tank. See the attached file to see how this works.....making sure NOT to mix chips and tanks..

PRINTER SETTINGS

For best results printing on Frosting Sheets, it is best to set up your Printer Settings in the Printer Software as follows:

CANON PRINTERS

BEST SETTINGS FOR ALL CANON PRINTERS

Media	Print Quality
PLAIN PAPER	HIGH

EPSON PRINTERS

BEST SETTINGS FOR ALL EPSON PRINTERS

Media	Print Quality
MATTE PAPER	PHOTO PHOTO ENHANCE

Please use cartridge as below instruction

1. Please remove the adhesive tape from the cartridge before installing into the printer

Very carefully remove the chip from the original cartridge with an appropriate tool such as a small knife or screwdriver. Place the chip into the slot intended for it on the cartridge as shown below. Extra care must be taken not to damage the chip in any way while removing or installing it.

2. During printing, when the screen shows you ink volume is low and indicates you to replace a new ink cartridge, what you need to do at this moment is to choose to go on using the cartridge. If at that moment the OEM chip has been installed to the new cartridge, please be rested that the choice of go on using the new cartridge will not damage your printer.

3. In the process of printing, when the screen shows exact the same as what on the following picture, you are not allowed to do any printing. What you need to do at that time is to press the RESET button for 10 Seconds. The chip will be automatically be decoded.

4. The decoded chips will not reflect the correct ink volume informations. All cartridges will be showed empty in the screen. So you need to replace ink cartridges when their inks are used up in time.

CHANGING MICROCHIPS ON CANON EDIBLE INK TANKS