

# READ ME FIRST!

Reading these brief instructions before attempting to use your projector will improve your chances of success and reduce potential frustrations!



## SETTING UP YOUR PROJECTOR

- Complete and return the Warranty Registration Card.

### Baseboard Model:

- Mount the Lower Tube (B) to Baseboard (A) with the 4 screws. You will need a cross-head screwdriver.

### Table Clamp model - See inset diagram

- Fasten the Table Clamp (M) to edge of table and secure firmly over base plate on Lower Tube (B).

- Attach Projector Head (D) by inserting Upper Suspension Tube (E) into Tube to Head Coupling (F) and firmly tighten the screw.
- Insert Upper Suspension Tube (E) in to Twist Grip Clamp (C) and tighten.

## INSERTING THE LENS - See diagram opposite.

Do Not insert the lens tube from *inside* the projector.

Insert the Lens (J) UP into the projector via the lens barrel. At the end of the lens barrel you will notice the Lens Collar (I) is split, this is to allow the collar to expand to accept the lens.

### For Enlarging your image size:

Insert the lens UP into the projector with the GLASS END UP

### For Reducing your image size:

Insert the lens UP into the projector with the GLASS END DOWN

## GETTING STARTED

1. Open the door of your projector. Screw in the lamp. Remove protective film from mirror - Do Not touch the mirror surface.
2. Place your image (max 6"x6") under the spring clips.
3. Close the door, connect the projector to grounded electrical outlet and turn on. Your image will appear on your work surface.
4. Loosen the Twist Grip Clamp (C) to raise or lower your projector until the desired SIZE of image is projected.
5. Once satisfied with the size of your image, FOCUS by moving the lens UP and Down inside the lens barrel.
6. If you have purchased a Reduction Lens (Item # RD300) then attach this over the Glass End of the lens when reducing.

## FOR BEST RESULTS


- Read these instructions above BEFORE using the projector.
- The projector will get hot when in use. If the projector is left switched on for a number of hours you risk causing damage to your photographs or original image.
- Thin original images will project better if attached to a stiffer piece of card.
- While Kopykake projectors give a bright, clear image; the darker the room the better. Avoid direct light for best results.
- If your original image is larger than 6"x6" consider the following:
  1. Projecting your image in sections
  2. Scanning it and reprinting to a maximum size of 6"x6"
  3. Photocopy it, reducing the copy to a max of 6"x6"

### Specifications


Copy Size: 6"x6"  
Lens: 200mm F/3  
Illumination: 500w (550v 220v)  
Electrical: 110/120v 60hz (220/240 50hz)

Range: 70% to 400% vertically  
70% to 2500% horizontally  
Cooling: 40CFM quiet fan  
Weight: 21lbs (9.5kg)

- A - Baseboard (BB001)
- B - Lower Tube (01051)
- C - Twist Grip Clamp (HP013)
- D - Projector Head (K1H01)
- E - Upper Suspension Tube (01053)
- F - Coupling Tube to Head (01041)
- G - Rocker Switch On/Off (ES002)
- H - Microswitch (ES004)
- I - Lens Collar (PC003)
- J - Lens Assembly (LA001)
- K - Door Knob (HB004)
- L - Latch (HB005)
- M - Table Clamp (03140)
- 250w Lamp (L0001)

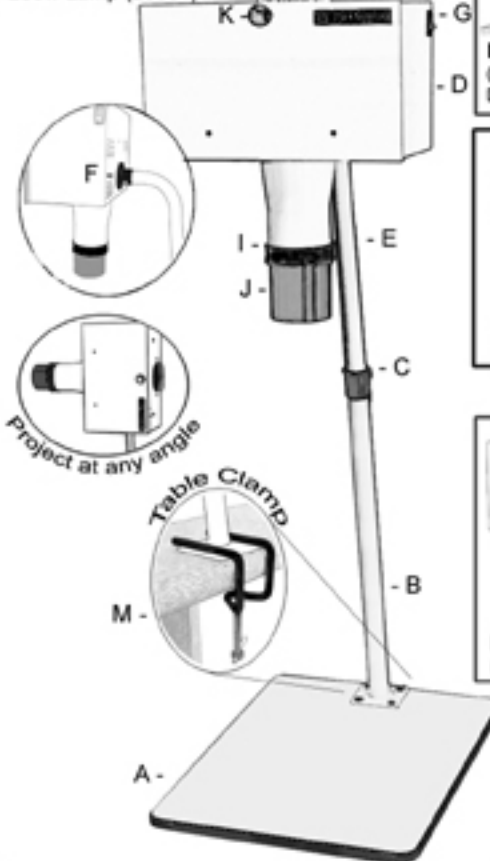

## Model K1000

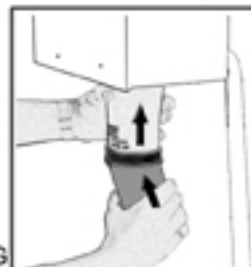

**Inserting the Lens**  
(Glass end UP for enlarging  
Down for Reducing)



**Inserting image**  
(max size 6"x6")



**Focusing image**  
(move Lens up and down)

## Warranty & Returns Policy

All Kopykake projectors are tested before shipment and this Kopykake projector is guaranteed against any defect in material or workmanship for a period of 5 years. Any part of the equipment found to be defective under normal use during the warranty period will be repaired or replaced by Kopykake at its option. Kopykake assumes no responsibility for damaged equipment due to negligence by the user. **This warranty does not apply to lamps.**

### Returning your projector:

Any equipment being returned must have a Return Authorization Number (RA#) obtained from Kopykake. A product returned without an RA# will be subject to a delay in processing.

1. Contact Kopykake for a Return Authorization Number
2. Package your projector well to avoid damage in transit. Any damage will be assumed to have occurred prior to shipping so please be sure to protect the projector well
3. Include Proof of Purchase and a note explaining the reason for return
4. Mark the RA# on the note AND the exterior of the package so it can be easily identified
5. Return the projector via UPS or any other Carrier company

Equipment replaced or repaired under warranty will be returned freight or postage paid by Kopykake. The warranty period for repaired or replaced parts shall be for the duration of the original warranty.

We regret that any Returns to Stock will be subject to a 20% re-stocking fee.



3699 West 240th St. Torrance California 90505 USA  
Tel: 310-373-8906 Fax: 310-375-5275  
sales@kopykake.com www.kopykake.com