

READ ME FIRST!

Reading these brief instructions before attempting to use your Turntable will improve your chances of success and reduce potential frustrations!



T1000, T1000-B series Karousel Turntable

*Warranty Begins from date of purchase

GETTING STARTED & OPERATING INSTRUCTIONS

T1000 Electric Turntable

1. Connect the Power Cord to a grounded electrical outlet
2. Push Switch A to turn the Karousel Turntable On / Off
3. Adjust the speed of the turntable by turning the adjustable Speed Control Knob B clockwise (increase speed) or counter clockwise (decrease speed)
4. To change the direction of the Karousel Turntable, simply push the Direction rocker Switch C
5. The table top of the Karousel Turntable may be spun freely in either direction while the power is On or Off
6. The plastic cover on the table top can be removed for cleaning

**** NOTE: Never submerge the Karousel Turntable or other electrical appliance in water ****

T1000-B Battery Operated Turntable

Batteries are installed and included when shipped from Kopykake.

1. Push Switch A to turn the Karousel Turntable On / Off
2. Operate in the same manner as the above Electric Turntable instructions.

To replace the 6 volt battery

1. Remove the 3 cover screws (E) to remove the cover
2. Disconnect Battery Clips
3. Loosen Battery Straps and slide Battery out
4. Replace Battery, tighten straps, connect clips and attach cover

Some Useful Tips


- Read these instructions above BEFORE using the Karousel
- The Karousel will significantly reduce decorating time, use it when you apply decorative icing or you ice the sides and top of your cakes
- Remember that the Karousel can be spun in any direction even with the motor running.
- Use the Karousel Turntable as a display unit to show off your creations or even wedding cakes
- Rent the Karousel to customers for weddings and special parties - help them make their cake the center of attention!

Specifications

Size: 12" x 12" x 6"
Electrical: 110/120v 60hz (220/240 50hz)
Battery: 6 volt Lantern
Weight: 7lbs (3.1kg)

Karousel Turntable T1000 & T1000-B

Model pictured
T1000

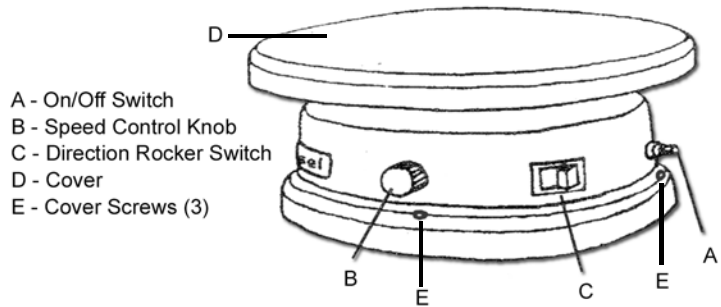

WARRANTY & RETURN POLICY

ALL KOPYKAKE PRODUCTS ARE TESTED BEFORE SHIPMENT AND THIS PRODUCT IS GUARANTEED AGAINST ANY DEFECT IN MATERIAL OR WORKMANSHIP FOR A PERIOD OF:

- 1 YEAR FOR COMPRESSORS
- 2 YEAR FOR TURNTABLES
- 5 YEARS FOR PROJECTORS
- AIRBRUSHES CARRY NO WARRANTY

ANY PART OF THIS PRODUCT TO BE DEFECTIVE UNDER NORMAL USE DURING THE WARRANTY PERIOD WILL BE REPAIRED OR REPLACED BY KOPYKAKE AT ITS OPTION. KOPYKAKE ASSUMES NO RESPONSIBILITY FOR DAMAGED DUE TO NEGLIGENCE BY THE USER.

RETURNING YOUR PRODUCT

ANY EQUIPMENT BEING RETURNED MUST HAVE A RETURN AUTHORIZATION NUMBER (RA#) OBTAINED FROM KOPYKAKE. A PRODUCT WITHOUT AN RA# WILL BE SUBJECT TO A DELAY IN PROCESSING.

1. CONTACT KOPYKAKE FOR A RETURN AUTHORIZATION NUMBER
2. PACKAGE YOUR PRODUCT WELL TO AVOID DAMAGE IN TRANSIT. ANY DAMAGE WILL BE ASSUMED TO HAVE OCCURRED PRIOR TO SHIPPING
SO PLEASE BE SURE TO PROTECT THE PRODUCT WELL
3. INCLUDE PROOF OF PURCHASE AND A NOTE EXPLAINING THE REASON FOR THE RETURN
4. MARK THE RA# ON THE NOTE AND THE EXTERIOR OF THE PACKAGE SO IT CAN BE EASILY IDENTIFIED
5. RETURN THE PRODUCT VIA UPS OR ANY OTHER CARRIER COMPANY

IN THE U.S.A. - IF KOPYKAKE FINDS THAT A PRODUCT WAS DEFECTIVE, THEN EQUIPMENT REPLACED OR REPAIRED UNDER WARRANTY WILL RETURNED TO CUSTOMER. FREIGHT OR POSTAGE PAID BY KOPYKAKE

OUTSIDE OF THE U.S.A. - KOPYKAKE WILL REPLACE DEFECTIVE PARTS, BUT CUSTOMER WILL BE RESPONSIBLE FOR SHIPPING CHARGES

THE WARRANTY PERIOD FOR REPAIRED OR REPLACED PARTS SHALL BE FOR THE DURATION OF THE ORIGINAL WARRANTY.

WE REGRET THAT ANY RETURNS TO STOCK WILL BE SUBJECT TO A 20% RESTOCKING FEE.



3699 West 240th St. Torrance California 90505 USA
Tel: 310-373-8906 Fax: 310-375-5275
sales@kopykake.com www.kopykake.com